


STEP FOUR

Put a bead of sealant on the last step flashing about 1 inch from edge of curb. Install back plate flashing by nailing to the deck at least 12 inches up from the curb and bend around curb at top. Check to see that the sealant has completely closed the gap to protect against wind driven rain. Allow back pan to overhang the curb at bottom so that water is directed away from the curb.

ILLUSTRATION #7


HAMMER
TOP PORTION
OF OVERLAP
AGAINST CURB

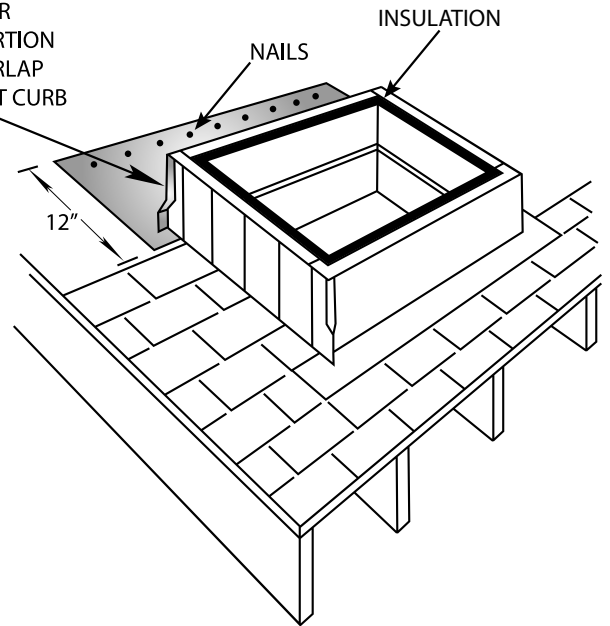

STEP FIVE

If step flashing protrudes above curb, bend flat on top of the curb. Run a bead of sealant around the top of the curb. If the curb is higher than the top of the step flashing then counter flash with another flashing which covers over the step flashing up to the top of the curb and over at least an inch. After installing the sealant put the Sky-Tech skylight on top of the curb and screw or nail to the curb.

ILLUSTRATION #8

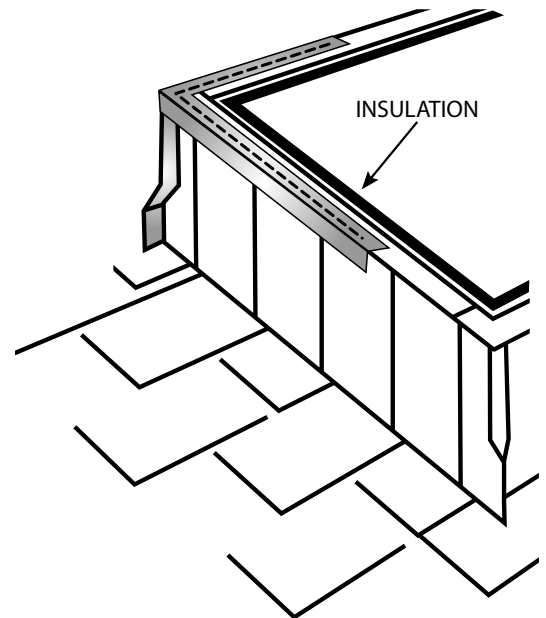

MEMBER

*Prior to construction, check with all local building authorities and check building codes for compliance.